

SCENARIOS

Accesses the section containing the list of programmed scenarios which can be activated

No code required

↓ ↑, keys to scroll the list

ACTIVATE, key to activate the scenario

User code required depending on scenario

COMMANDS

Accesses a section containing the list of outputs which can be activated. The outputs are divided in two sections:

DOMOTICS, outputs for management of home automation

No code required

INTRUSION, outputs programmed via the anti-intrusion system

User code required

↓ ↑, keys to scroll the list

ON, key to activate the output

OFF, key to deactivate the output

☐, output activated

☐, output deactivated

SETTINGS

Accesses the sections for the settings of the keypad and the SmartLiving control panel:

User code required

ALIEN, provides information regarding the setting-up of the Alien you are using

↓ ↑, keys to scroll the list

− +, keys to change the parameter

DATE/TIME CHANGE PIN TEL.NUMBERS

DATE/TIME, section to change date and time of control panel:

← →, keys to select the field

↓ ↑, keys to change the field

OK, key to confirm the field modified

CHANGE PIN, section to change the user code PINs:

↓ ↑, keys to scroll the list

ON, key to change the PIN selected

OK, key to confirm the changes

TEL.NUMBERS, section to change the telephone numbers:

↓ ↑, keys to scroll the list

ON, key to change the number selected

OK, key to confirm the changes

INSTALLER, this section allows access to the installer menu

Installer code required

Touching the "Settings" option for at least 7 seconds disables the sensitivity of the display for 20 seconds, and the "CLEAN SCREEN" message is shown

INTRUSION

Accesses a section which allows you to view and change the status of parts of the intrusion-control system:

User code required

PARTITIONS, section to view and change the status of the partitions:

← →, keys to select the partition

↓ ↑, keys to change the arming mode

OK, key to apply the selected arming mode

ZONES, zones are listed in this section along with their status icons:

●, green spot - standby status

●, red spot - alarm status

▲, yellow triangle - fault/tamper

ON, key to activate the zone

OFF, key to inhibit the zone

☐, zone activated/enabled

☐, zone deactivated/disabled

EVENTS LOG, here it is possible to view the events saved to the memory:

↓ ↑, keys to scroll the list

PARTITIONS, key to view the partitions involved

SYSTEM

Accesses a section where it is possible to view the system parts:

User code required

FAULTS, this section to view all the faults present on the system

↓ ↑, keys to scroll the list

DETAILS, key to view the fault details

VOLTAGE, this section allows you to view the control panel power-supply voltage

GSM INFO, this section allows you to view the parameters of the Nexus GSM communicator

Back, this button allows you to step back to the previous level of the active function

Home, button which allows you to go directly to the home page

Logout, button that allows you to close the open session after entering a valid user code

icon that appears when touching the display and the keypad is locked after entering a wrong PIN for 5 times

icon displayed when approaching a key and the reader is locked after the use of an invalid key for 5 times

Accesses two sections:

User code required

ACTIONS, containing a list of the control panel commands in the event of alarm or tamper events or requests for teleservice and overtime

ACTIVATIONS, where it is possible to view and enable the activations of the system parts

↓ ↑, keys to scroll the list

ACTIVATE, key to activate the action or to access to the system part section

ON, key to activate the element

OFF, key to deactivate the element

☐, element activated

☐, element deactivated

MENU

Accesses the applications of the Alien touch screen interface:

No code required

PHOTO FRAME, application that starts a slideshow of the images contained in the inserted SD-card

VOICE FUNCTIONS, accesses a section where it is possible to activate the control panel voice board functions

• Record

• Playback

• Delete

ON, key to start the selected function

Stop, key to interrupt the record/playback operation manually

OK, key to confirm the delete function

APPS

Access the "Thermostat" section:

No code required

MANUAL, the temperature set by the user is valid for 24 hours per day, for 7 days per week

DAILY, the temperature set by the user is valid during the selected hours for 7 days per week

WEEKLY, the temperature set by the user is valid during the selected hours on specific days of the week

Summer, key to selected for the winter or summer operating modes

Winter

− +, keys to change the temperature

← →, keys to change the parameter

ANTIFREEZE, it forces to winter mode; the activation temperature is 2°C

OFF, the thermostat is off; the output associated with the heater or air-conditioner is deactivated

CLIMA

A	Date and time of the SmartLiving control panel If the control panel is in service status, this field will show the address of the Alien user interface and its built-in reader.	Alien - display
B	Keypad LED icons (see table below).	
C	Temperature read by the thermometer of the Alien user interface.	
D	Icon which indicates the presence of an SD card in the card slot.	
E	Section for active functions, with the buttons for access to the Alien user interface, its applications and the SmartLiving system. The home page of the Alien/S (shown in the figure) shows the function buttons (see behind). In the Alien/G, these buttons are shown in a section on the left and are always visible regardless of the active function.	
F	String showing the arming status of the control panel, in accordance with the active scenario. If a keypad partition changes its arming status with regard to the active scenario, or when the control panel is in service mode, this string will show the characters relative to the arming status of the partitions: D = partition disarmed A = partition armed in Away mode (interior and perimeter zones armed) S = partition armed in Stay mode (perimeter zones armed) I = partition armed in Instant mode (perimeter zones armed with no delay) - = partition does not belong to the keypad	
G	System information icons, as described in the table below.	

Icon	Name	Not present	ON solid	Blinking
	Telephone line		Telephone line busy	Telephone line down
	Peripheral Loss	All the peripherals in the system configuration are responding properly (present)	At least one peripheral (keypad, reader, expansion) is not responding properly	All the peripherals in the system configuration are responding properly, however, loss of a peripheral has been detected and cleared
	Answerphone	Answerphone function disabled	Answerphone function enabled	
	Teleservice	Teleservice disabled	Teleservice enabled	
	Key			False key
	Peripheral tamper	All peripherals are properly placed and all enclosures covers are closed	At least one peripheral (keypad, reader, expansion) is in tamper status (enclosure open or device dislodged)	All peripherals are properly placed and all enclosure covers are closed, however, tamper has been detected and cleared (Tamper memory)
	Control panel tamper	The control panel is properly placed and the enclosure is closed	The control panel is in tamper status (enclosure open or device dislodged)	The control panel is properly placed and the enclosure is closed, however, panel tamper has been detected and cleared (panel tamper memory)
	GPRS connection			Ongoing GPRS connection via the Nexus/G dialer
	Call on Nexus		Ongoing phone call via the Nexus/G dialer	
	SMS sending		Ongoing SMS message sending via the Nexus/G dialer	
	LAN		Ongoing event sending via LAN with SIA-IP protocol	LAN board not responding
	SIA-IP on Nexus		Ongoing event sending via Nexus/G with SIA-IP protocol	
	Thermostat: Winter mode	The thermostat option is disabled.	The keypad thermostat option is enabled in winter mode (heating)	
	Thermostat: Summer mode		The keypad thermostat option is enabled in summer mode (air-conditioning)	
	Thermostat: Heater/Air-conditioner	Heating/Air-conditioning OFF	Heating/Air-conditioning ON	

Activation	Red LED	Yellow LED	Blue LED	Green LED
OFF (no light)	All the keypad partitions are disarmed.	No faults present.	Open zones on the keypad partitions.	Primary power failure (230V a.c.)
ON (solid)	At least one of the keypad partitions is armed.	At least one fault has been detected.	All the zones on the keypad partitions are in standby status: ready to arm.	Primary power OK (230V a.c.)
Slow blinking (ON: 0.5sec OFF: 0.5sec)	All the keypad partitions are disarmed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm.	No faults present. At least one of the zones belonging to the keypad partitions is either disabled (inhibited) or is in Test status	All the zones belonging to the keypad partitions are in standby status. An unplayed voice message is present in the memo box.	
Fast blinking (ON: 0.15sec OFF: 0.15sec)	At least one keypad-partition is armed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm.	At least one fault is active and at least one zone belonging to the keypad partitions is either disabled (inhibited) or is in Test status.	Open zones on the keypad partitions. An unplayed voice message is present in the memo box.	