



KB9 Elect. Keyboard 61 key Lighting

Ref. nr.: 130.104



INSTRUCTION MANUAL

V1.0

Congratulations to the purchase of this Max Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

- Supplied contents:
- MAX Music KB9 keyboard
 - Power supply
 - Music sheet stand


POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

CONTROLS

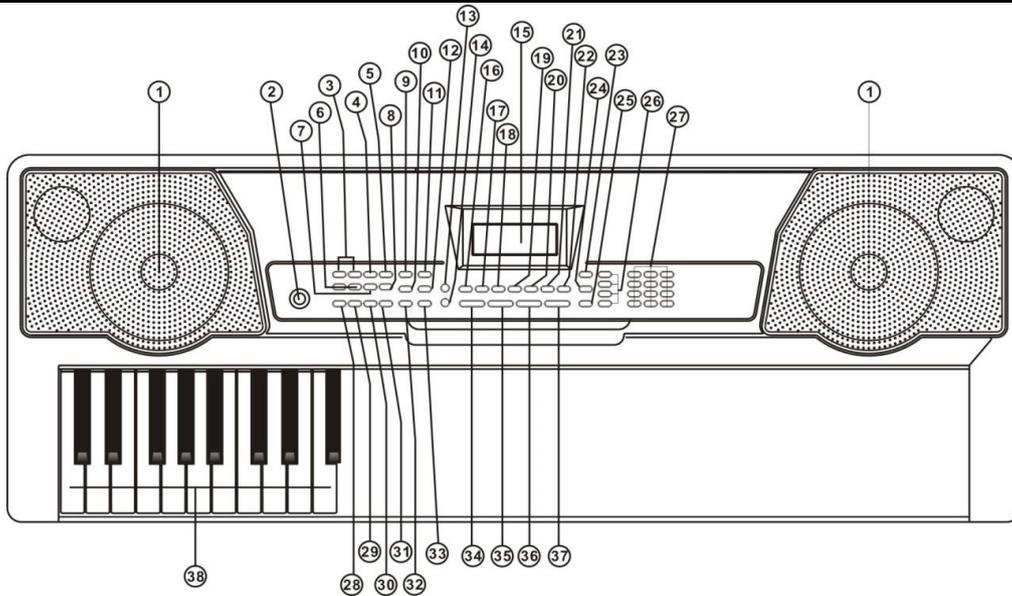

- 1. SPEAKERS**
Loudspeakers to reproduce the sound of the music played. Sound level is determined on the basis of the volume setting.
- 2. POWER ON/OFF**
Switch to turn the keyboard on or off.
- 3. PREVIOUS / NEXT**
Buttons to select previous and next song.
- 4. PLAY / PAUSE**
Press to start/resume or pause MP3 play.
- 5. STOP**
Press to stop MP3 play.
- 6. VOLUME CONTROL**
Buttons to raise and lower MP3 volume.
- 7. CONTINUOUS / RANDOM / SINGLE PLAYBACK**
Press to select a repeat mode.
- 8. SOUND EFFECT**
Press to change the sound effects between common, pop, rock, jazz and classic. The common effect is set as default.
- 9. SYNC**
When in rhythm mode, press [SYNC]. "SYN" will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accompaniment rhythm.
- 10. FILL-IN**
Press the [FILL-IN] button to add an interlude to the rhythm. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

11. TIMBRE

Press [TIMBRE] to enable the tone selection function. This keyboard provides 255 timbres ("000" to "254") for your selection. The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

12. RHYTHM

Rhythm selection:

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [RHYTHM] to initiate the rhythm selection function. Press the numeric keys or the "+" / "-" buttons to select other rhythms.

Rhythm enabling:

Press [START/STOP] to start accomp rhythm. While in enable state: Press [SYNC], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [START/STOP] to stop the accomp rhythm.

Interlude:

After the accomp rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accomp rhythm.

13. KEY LIGHTING

The keyboard is provided with a luminous function, during regular playing, training and playing to demo songs, the light hint will be provided. The luminous function is defaulted to be enabled, press [KEY LIGHTING] to enable or disable the luminous function.

14. DEMO SONG

This keyboard has 50 stored demo songs ("000" to "049") for your selection. Press [DEMO SONG] and the demo songs will start to play in order. Keys will light up according to the melody played and "SONG" will be shown on the display.

During playing process, press [DEMO SONG] to play the next demonstration song. Press [START/STOP] to stop playing.

During the playing process, you can also press the num pad buttons or the "+" / "-" buttons to select other demonstration songs. The selected demonstration song will then play repeatedly.

Press [TIMBRE] during the demonstration song playing process and "TONE" will be shown on the display. Press the "+" / "-" buttons within 3 seconds of "TONE" appearance to select other tones for the playing demonstration song.

15. LCD DISPLAY

Displays current mode, notes to play, rhythm, tempo, etc.

16. KEYBOARD PERCUSSION

This Keyboard provides 61 kinds of keyboard percussions. Press [KEYBOARD PERCUSSION] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disable the keyboard percussion function.

17. RECORD

Press [REC] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will appear on the display and recording will stop automatically. Press [PLAY] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [PLAY] to playback the recorded rhythm.

18. PROGRAM

Press [PROG] to enable the rhythm programming function, "PRG" will show on the display and the keyboard percussion function will be activated. 32 Percussions can be programmed at maximum, after that "PRG" will flash on the display and programming will stop automatically. Press [PLAY] to playback the programming rhythm. Press [START/STOP] or press [PROG] again to disable the programming function. All recorded rhythms will be removed.

19. PLAY

Press to playback recorded notes or rhythms.

20. SPLIT

Press [SPLIT] to enable the keyboard splitting function. 24 keys on the left of the keyboard will split with the remaining keyboard. While the left keyboard zone will increase by one octave and maintain the original tone, the right keyboard zone will decrease by one octave to maintain the same pitch with the left keyboard zone. The tone of the right keyboard zone can be set as needed so different tones can be played by the left and right keyboard zones at the same time.

Press [SPLIT] again to disable this function.

21. SUSTAIN

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disabled.

22. VIBRATO

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disabled.

23. ONE-KEY TRAINING

Press [ONE KEY] to enable the single key training function. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [ONE KEY] button to disable the training function.

24. FOLLOW TRAINING

Press [FOLLOW] to enable the follow function. Press "+" / "-" button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [FOLLOW] to disable the training function.

25. ENSEMBLE TRAINING

Press [ENSEMBLE] to enable the ensemble function. Press “+”/“-” button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [ENSEMBLE] to disenable the training function.

26. MEMORY

With the status memory function, you can save tone, rhythm, tempo and other parameters for fast shifting during playing. This keyboard is equipped with 3 saving slots, which can be called at any time during playing. Set tone, rhythm, tempo and chord as required and press the [MEMORY] button. Select [MEMORY 1] to [MEMORY 3] to save the current status.

27. NUM PAD

Numeric keys to enter an exact value.

28. SINGLE CHORD

Under the state that the rhythm is activated, press [SINGLE CHORD]. After “SIN” shows on the display, you can play a single chord on the keys in the chord zone of the keyboard.

29. FINGERED CHORD

In this mode, you play the individual notes of the chord in your left hand. Under the state that the rhythm is activated, press [FINGERED CHORD]. After the “FIN” shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard.

30. CHORD TIMBRE

During single chord or fingered chord accompaniment, you can press [CHORD TIMBRE] to change the chord tone. Press [CHORD TIMBRE] again to resume the original chord tone.

31. CHORD OFF

Press [CHORD OFF] to disenable the single chord or the fingered chord function.

32. METRONOME

There are 4 kinds of metronomes stored on the keyboard: 1/4 beat, 2/4 beat, 3/4 beat and 4/4 beat. Press [METRONOME] once to set the rhythm at 1/4 beat, twice for 2/4 beat, etc. press for fifth time to cancel function.

33. START/STOP

Press to start or stop playing selected program.

34. MASTER VOLUME

Press [MASTER VOL +] or [MASTER VOL -] to raise or lower the master volume. Press both simultaneously to reset to default value.

35. ACCOMPANIMENT VOLUME

Press [ACCOM VOL +] or [ACCOM VOL -] to raise or lower the accompaniment volume. Press both simultaneously to reset to default value.

36. TEMPO

Press [TEMPO +] or [TEMPO -] to increase or decrease the tempo. Press the two buttons simultaneously to reset to the default value.

37. TRANSPOSE

Press [TRANSPOSE +] or [TRANSPOSE -] to transpose the tone of the notes. The transpose may be adjusted from “-6” to “+6”. Pressing the two buttons simultaneously resets transpose to the default value.

38. CHORD ZONE

Chord key zone (1st-19th key from left).

CONNECTIONS

39. USB SLOT

Insert a USB flash disk into this port on the rear of the Keyboard for MP3 music playing. Supports 32G max.

40. AUDIO INPUT

Turn off the keyboard and external audio device of choice. Connect one end of the audio cable to the INPUT port on the rear panel of the keyboard, connect the other end to the audio port of the device.

41. MICROPHONE INPUT


Connect a microphone to the MIC port to sing while playing the keyboard.

42. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disenabled automatically. You can perform without disturbing others and others disturbing you.

43. DC 12V INPUT

Socket for plugging in the supplied power adapter.

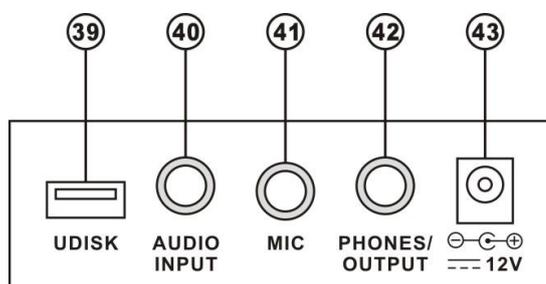

AUTO RHYTHM

Rhythm selection

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [RHYTHM] to initiate the rhythm selection function. Press the numeric keys or the "+" / "-" buttons to select other rhythms.

Rhythm control

1. Rhythm enabling

Press [START/STOP] to start accompaniment rhythm. While in enable state: Press [SYNC], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accompaniment rhythm will be activated.

2. Interlude

After the accompaniment rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accompaniment rhythm.

3. Stop rhythm

Press [START/STOP] to stop the accompaniment rhythm.

Tempo adjustment

Press [TEMPO +] or [TEMPO -] to increase or decrease the tempo. Press the two buttons simultaneously may reset to the default value.

EFFECT CONTROL

Sustain function

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disabled.

Vibrato function

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disabled.

RECORDING AND RHYTHM PROGRAMMING

Recording

Press [REC] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will be shown on the display and recording will stop automatically. Press [PLAY] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [PLAY] to playback the recorded rhythm.

Rhythm programming

Press [PROG] to enable the rhythm programming function, "PRG" will show on the display and the keyboard percussion function will be activated. 32 Percussions can be programmed at maximum, after that "PRG" will flash on the display and programming will stop automatically. Press [PLAY] to playback the programming rhythm. Press [START/STOP] or press [PROG] again to disable the programming function. All recorded rhythms will be removed.

TRAINING METHODS

Training I: One key

Press [ONE KEY] to enable the single key training function. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [ONE KEY] button to disable the training function.

Training II: Follow

Press [FOLLOW] to enable the follow function. Press "+" / "-" button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [FOLLOW] to disable the training function.

Training III: Ensemble

Press [ENSEMBLE] to enable the ensemble function. Press "+" / "-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [ENSEMBLE] to disable the training function.

RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



PIANO DUST BUSTER

PIANO DUST BUSTER is the ultimate introduction to piano for kids. No previous piano experience needed!



PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (*IOS compatible only!)



PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (*IOS-IPAD compatible only!)



SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(* Compatible with both IOS and ANDROID devices)



APPENDIX I. TIMBRE TABLE AND RHYTHM TABLE

Timbre Table

000 Acoustic Grand Piano	051 Electric Grand Piano	102 Feedback Gt. 1	153 Attack Clav. 1	204 Jazz Bass 2
001 Rhodes Piano	052 Honky-tonk Piano	103 Uilleann Harp 1	154 Crystal 1	205 Chorus Guitar 2
002 Chorused Piano	053 Harpsichord 1	104 Jazz Bass 1	155 Bag Pipe 2	206 Feedback Gt. 2
003 Celesta 1	054 Clavi 1	105 Flugel Horn 1	156 Barafon 1	207 Fiddle 2
004 Music Box 1	055 Glockenspiel 1	106 Muted Horn 1	157 Organ Flute 1	208 Organ Flute 2
005 Vibraphone	056 Tubular Bells 1	107 Wood Barafon 1	158 Kalimba 3	209 Flugel Horn 2
006 Marimba 1	057 Dulcimer 1	108 Electric Piano 1	159 Reed Horn 1	210 Crystal 2
007 Xylophone 1	058 Drawbar Organ 1	109 Multi Reed 1	160 Hard Vibe 2	211 Soft Clav. 2
008 Percussive Organ	059 Tango Accordion 1	110 Guitar Pinch 1	161 Twin Trombones 1	212 Overdriven Guitar 2
009 Rock Organ	060 Electric Guitar (Muted)1	111 Multi Wind 1	162 Synth Harpsi. 2	213 Ukulele 2
010 Church Organ	061 Overdriven Guitar 1	112 Clavi 2	163 Attack Clav. 2	214 Tango Accordion 2
011 Reed Organ 1	062 Contrabass 1	113 Celesta 2	164 Chorus Guitar 1	215 Twin Trombones 2
012 Accordion	063 Tremolo Strings	114 Harpsichord 2	165 Steel Bell 2	216 Jazz Organ 2
013 Harmonica	064 Pizzicato Strings 1	115 Mellow Fm 1	166 Tsugaru	217 Bright String 2
014 Acoustic Guitar (Nylon)	065 Timpani	116 Pi Pa 2	167 Oct Harp 1	218 Reed Horn 2
015 Acoustic Guitar (Steel)	066 String Ensemble 2	117 Upright Piano 1	168 Bodhran 1	219 Glockenspiel 2
016 Electric Guitar (Jazz)	067 Synth Strings 1	118 Electric Piano 2	169 Tubular Bells 2	220 Drawbar Organ 2
017 Electric Guitar (Clean)1	068 Synth Strings 2	119 Hard Vibe 1	170 Suona	221 Muted Horn 2
018 Distortion Guitar	069 Choir Aahs	120 Wood Barafon 2	171 Castanets	222 Pizzicato Strings 2
019 Acoustic Bass	070 Voice Oohs	121 Music Box 2	172 Attack Harp 1	223 Nay 2
020 Electric Bass (Finger)	071 Synth Voice	122 Marimba 2	173 Electric Vibraphone 1	224 Puff Harmonica 2
021 Electric Bass (Pick)	072 Orchestra Hit	123 Santur	174 Soft Sax 1	225 Muted Trumpet 2
022 Fretless Bass	073 Muted Trumpet 1	124 Reed Organ 2	175 Soft Clav. 1	226 Upright Piano 2
023 Slap Bass 1	074 Synth Brass 2	125 Puff Harmonica 1	176 Soft Guitar 1	227 Soft Accord 2
024 Slap Bass 2	075 English Horn 1	126 Ukulele 1	177 Grow Guitar 1	228 Uilleann Harp 2
025 Synth Bass 1	076 Recorder	127 12-str. Gt 1	178 Didgeridoo 1	229 Tron Flute 2
026 Synth Bass 2	077 Blown Bottle 1	128 Guitar Pinch 2	179 Attack Barafon 1	230 Blown Bottle 2
027 Violin	078 Shakuhach	129 Slow Violin 1	180 Mute Barafon 1	231 Indian Flute 2
028 Viola	079 Whistle	130 Bright String 1	181 Nay 1	232 Slow Violin 2
029 Cello	080 Ocarina	131 Jungle Bass 2	182 Soft Santur	233 Electric Guitar (Muted)2
030 Orchestral Harp	081 Lead (Sawtooth)1	132 Indian Flute 1	183 Dual Horns 1	234 Multi Wind 2
031 String Ensemble 1	082 Lead (Calliope)1	133 Clavi 3	184 Hard Barsoon 1	235 Electric Vibraphone 2
032 Trumpet	083 Lead (Bass+Lead)1	134 Celesta 3	185 Tron Flute 1	236 Bodhran 2
033 Trombone	084 Pad (Warm)1	135 Church Bells	186 Kawala 1	237 Mellow Fm 2
034 Tuba	085 Sitar	136 Marimba 3	187 Jazz Organ 1	238 Multi Reed 2
035 French Horn	086 Shamisen 1	137 Dulcimer 2	188 Soft Accord 1	239 Contrabass 2
036 Brass Section	087 Koto 1	138 Reed Organ 3	189 Wind Organ 1	240 Barafon 2
037 Synth Brass 1	088 Kalimba 1	139 Electric Guitar (Clean)2	190 Viola Attack 1	241 Wind Organ 2
038 Soprano Sax	089 Bag Pipe 1	140 Koto 2	191 Bari & Tenor 1	242 12-str. Gt 2
039 Alto Sax 1	090 Fiddle 1	141 Xylophone 2	192 Soft Sax 2	243 Attack Barafon 2
040 Tenor Sax	091 Shanai 1	142 Shanai 2	193 Attack Harp 2	244 Lead (Calliope)2
041 Baritone Sax	092 Tinkle Bell	143 Dulcimer 3	194 Didgeridoo 2	245 Viola Attack 2
042 Oboe	093 Agogo 1	144 English Horn 2	195 Dual Horns 2	246 Pad (Warm)2
043 Bassoon	094 Steel Drums	145 Electric Guitar (Clean)3	196 Hard Barsoon 2	247 Oct Harp 2
044 Clarinet	095 Woodblock 1	146 Shamisen 2	197 Kawala 2	248 Bari & Tenor 2
045 Piccolo	096 Taiko Drum	147 Koto 3	198 Soft Guitar 2	249 Agogo 2
046 Flute	097 Melodic Tom 1	148 Kalimba 2	199 Mute Barafon 2	250 Flugel Horn 3
047 Pan Flute	098 Synth Drum	149 Steel Bell 1	200 Lead (Bass+Lead)2	251 Organ Flute 3
048 Lead (Square)	099 Reverse Cymbal	150 Alto Sax 2	201 Melodic Tom 2	252 Fiddle 3
049 Banjo	100 Jungle Bass 1	151 Woodblock 2	202 Grow Guitar 2	253 Feedback Gt. 3
050 E-Tone Piano	101 Pi Pa 1	152 Synth Harpsi. 1	203 Lead (Sawtooth)2	254 Chorus Guitar 3

Rhythm Table

000 Hard Rock	051 China 2	102 Jazz Latin 1	153 Club Dance 1	204 Caribbean Dance 2
001 Club Pop	052 China 3	103 Unplugged	154 Tricks Bossa Nova	205 Jazz Disco 2
002 Fusion	053 China 4	104 Boogie	155 Tarantella 2	206 Medium Jazz
003 Rap Pop	054 China 5	105 Cumbia 2	156 USA March	207 Piano Ballad
004 British Pop 1	055 8 Bt Up Tempo	106 Classical Slow Rock	157 Espag Nol 2	208 70's Disco
005 Twist	056 16 Beat Pop	107 European Disco 1	158 Club Latin 2	209 Jazz Rock 2
006 8 Beat Pop 1	057 16 Bt Shuffle 1	108 Big Band Middle 1	159 Jazz Cha Cha 1	210 Europe 8 Beat 1
007 Fusion Shuffle	058 16 Bt Shuffle 2	109 Chrliston	160 Country Cha Cha	211 Seville 2
008 Funk	059 16 Bt Ballad 1	110 Pasodobl	161 Disco Party 2	212 Rumba 3
009 Funk Shuffle	060 16 Bt Ballad 2	111 Cat Groove 1	162 Modern R&B 1	213 Soul Rock 2
010 Rock'n Roll 1	061 Soul	112 Jazz Tango 1	163 8 Beat Pop 2	214 European Disco 2
011 Rock Pop	062 Pop Rock 1	113 Fast Gospel	164 Country Jazz	215 Analog Ballad 2
012 Rock Shuffle	063 Pop Rock 2	114 Big Band Fast 1	165 Soul Rock 1	216 Pub Piano 2
013 Rock Cha Cha	064 8 Bt Rock Balld	115 Tricks Mambo	166 Rumba 2	217 Europe Rumba
014 Straight Rock	065 16 Bt Rock Balld	116 Funky Disco 2	167 Samba 3	218 Rock'n Roll 2
015 Folk Rock	066 6/8 Hvy Rock	117 Latin Salsa	168 Modern R&B 2	219 Disco Trop
016 Pasodoble	067 16 Beat Rock	118 Pop New Age 2	169 Club Dance 2	220 Rock Salsa 1
017 Cha Cha	068 Bossa Nova 1	119 Jazz Swing 1	170 Country Bossa Nova	221 Europe 8 Beat 2
018 Fox Trot	069 Bossa Nova 2	120 Trip Hop	171 Jazz Bo 1	222 Europe Samba
019 Rumba 1	070 Salsa	121 Rave 2	172 Modern Cha Cha 1	223 Show Tune 2
020 Samba 1	071 Mambo	122 Acoustic Ballad 1	173 Pop Reggae 2	224 Jazz 16 Beat 2
021 Samba 2	072 Beguine	123 India's Indigenous	174 Rock Samba 1	225 Rock Samba 2
022 Schlager Rock	073 Bolero Lento	124 Indonesian Pop	175 Jazz 8 Beat 1	226 Jazz Waltz 2
023 Tango 1	074 Espagnole	125 Pop Ballad	176 Disco	227 Europe Reggae
024 Tango 2	075 Reggae 12	126 South Africa Country	177 Seville 1	228 Modern Cha Cha 2
025 Disco Latin 1	076 Pop Reggae 1	127 South Africa Polka	178 Disco Hands 2	229 R&B Ballad 2
026 Calypso	077 Slow Rock 1	128 Tarantella 1	179 Rock Ballad	230 Rock Boogie
027 Latin Rock	078 Slow Rock 2	129 Bright Pop	180 Mixed Bossa Nova	231 Jazz Bossa Nova
028 Bolero	079 R&B	130 Pub Piano 1	181 Jazz 16 Beat 1	232 Rock Salsa 2
029 Analog Ballad 1	080 Dance Pop 1	131 West Shuffle	182 Single 16 Beat 1	233 Slow & Easy
030 E_Ballad	081 Dance Pop 2	132 Big Band Fast 2	183 Love Song	234 Hip Waltz 1
031 Country Ballad	082 Euro Beat	133 Espag Nol 1	184 Single 16 Beat 2	235 Jazz Latin 2
032 Electro Pop	083 Euro House	134 Disco Funk 2	185 Disco Fox 2	236 Rock Disco 2
033 Pop New Age 1	084 Hip Hop	135 Pop Mambo	186 Pop Rock 3	237 Jazz Tango 2
034 8 Beat Modern 1	085 Swing	136 Europe Swing 1	187 Tijuana Waltz	238 Analog Ballad 3
035 R&B Ballad 1	086 Big Band Swing	137 Tricks Latin	188 British Pop 2	239 Europe Swing 2
036 Disco Fox 1	087 Jazz Quartet	138 Disco Samba 2	189 Show Tune 1	240 Hip Waltz 2
037 Disco Funk 1	088 Dixieland	139 Latin Waltz	190 Schlager Alp	241 Jazz Swing 2
038 Disco Party 1	089 Bluegrass 1	140 Dance Pop 3	191 Single Rock	242 Party Pop
039 Disco Samba 1	090 Bluegrass 2	141 Jazz Rock 1	192 Swing Waltz	243 Jazz Club
040 Disco Soul	091 8 Bt Country	142 Detroit	193 Slow Waltz	244 Guad Dance 2
041 Disco Trot	092 Country Rock	143 Fanatical Sand	194 Cat Groove 2	245 Jazz Bo 2
042 Rave 1	093 Cntry Ballad	144 European Rock 1	195 Country Slow Rock	246 Dixie Jazz 2
043 Funky Disco 1	094 March 1	145 Ground Beat	196 Rock Disco 1	247 Acoustic Ballad 2
044 Techno 1	095 March 2	146 8 Beat Modern 2	197 16 Beat Shuffle 1	248 Jazz Slow Rock
045 Techno 2	096 Polka	147 Jazz Disco 1	198 Jazz 8 Beat 2	249 16 Beat Shuffle 2
046 Saturday Night 1	097 Pop Waltz	148 Dixie Jazz 1	199 Casa	250 Polka Pop
047 Club Latin 1	098 Jive	149 Disco Chocolate	200 Guad Dance 1	251 Latin Party Pop
048 Disco Hands 1	099 Vienna Waltz	150 Disco Latin 2	201 Jazz Cha Cha 2	252 Parranda
049 Country	100 8 Beat Soul	151 Synth Boogie	202 Country Waltz	253 Carnival
050 China 1	101 Classical 8 Beat	152 Saturday Night 2	203 European Rock 2	254 60's Vintage Pop

TECHNICAL SPECIFICATION

Power Supply	: 100-240VAC 50/60Hz (12V Adapter)
Weight	: 4,20 kg
Dimensions (L x W x H)	: 930 x 340 x 110mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2020 by Tronios The Netherlands