



Instructions:

1. Use the correct head for the connector. The head can be rotated.
2. Open the handles, and then insert the connector with cable into the holder.
3. Squeeze the handles.
4. Adjust the adjusting screw to suit different length of connectors. (JL -H548B w/o adjust)

For use on RG58, RG59, RG6, RG7, RG11

F Compression connector

For crimping F connector	Compressed distance
RG-59/6	15.5~21.3mm
RG 11	30.5~36.0mm
RG-59/6	19.7~20.3mm
RG 11	34.8~35.4mm